

DMX Channels

10 channels

Channel 1 – Red ⚠️ **CH5 must be open** ⚠️
 0-255 Gradual adjustment Red, from 0-100%

Channel 2 – Green ⚠️ **CH5 must be open** ⚠️
 0-255 Gradual adjustment Green, from 0-100%

Channel 3 – Blue ⚠️ **CH5 must be open** ⚠️
 0-255 Gradual adjustment Blue, from 0-100%

Channel 4 – White ⚠️ **CH5 must be open** ⚠️
 0-255 Gradual adjustment Blue, from 0-100%

Channel 5 – Master Dimmer
 0-255 Gradual adjustment from dark to brightest 0-100%

Channel 6 – Strobe

0-64	Not functional
65-95	Strobe frequency, from low to high frequency
96-127	Not functional
128-159	Strobe frequency, from fast out to slow in, from low to high frequency
160-191	Not functional
192-223	Random strobe frequency, from low to high frequency
224-255	Not functional

Channel 7 – Built-in programs


0-7	Not functional
8-32	Program 1
33-57	Program 2
58-82	Program 3
83-107	Program 4
108-132	Program 5
133-157	Program 6
158-182	Program 7
183-207	Program 8
208-232	Program 9
233-255	Program 10

Channel 8 – Program Speed (⚠️ **CH1-4 and CH5 must be set between 1-255** ⚠️)
 0-255 From slow to fast

Channel 9 – Lens rotation wheel (⚠️ **CH1-4 and CH5 must be set between 1-255** ⚠️)
 0-127 Lens indexing
 128-191 CCW rotation, from fast to slow
 192-255 CW rotation, from slow to fast

Channel 10 – Pattern Wheel (⚠️ **CH1-4 and CH5 must be set between 1-255** ⚠️)
 0-63 Pattern 1 (Water effect)
 64-127 Pattern 2 (Dot effect)
 128-191 CCW rotation, from fast to slow
 192-255 CW rotation, from slow to fast

34 channels

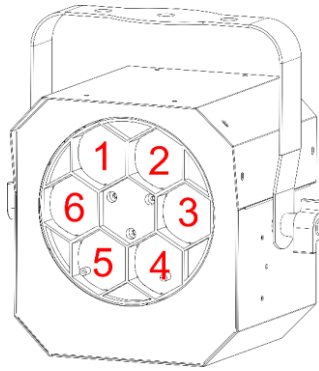

Channel 1 – Red ⚠️ **CH5 must be open** ⚠️
0-255 Gradual adjustment Red, from 0-100%

Channel 2 – Green ⚠️ **CH5 must be open** ⚠️
0-255 Gradual adjustment Green, from 0-100%

Channel 3 – Blue ⚠️ **CH5 must be open** ⚠️
0-255 Gradual adjustment Blue, from 0-100%

Channel 4 – White ⚠️ **CH5 must be open** ⚠️
0-255 Gradual adjustment Blue, from 0-100%

Channel 5 – Master Dimmer
0-255 Gradual adjustment from dark to brightest 0-100%

Channel 6 – Strobe
0-64 Not functional
65-95 Strobe frequency, from low to high frequency
96-127 Not functional
128-159 Strobe frequency, from fast out to slow in, from low to high frequency
160-191 Not functional
192-223 Random strobe frequency, from low to high frequency
224-255 Not functional

Channel 7 – Red 1 ⚠️ **CH1 & CH5 must be open** ⚠️
0-127 Red 1 Off
128-255 Red 1 On

Channel 8 – Green 1 ⚠️ **CH2 & CH5 must be open** ⚠️
0-127 Green 1 Off
128-255 Green 1 On

Channel 9 – Blue 1 ⚠️ **CH3 & CH5 must be open** ⚠️
0-127 Blue 1 Off
128-255 Blue 1 On

Channel 10 – White 1 ⚠️ **CH4 & CH5 must be open** ⚠️
0-127 White 1 Off
128-255 White 1 On

Channel 11 – Red 2 ⚠ CH1 & CH5 must be open ⚠

0-127 Red 1 Off
128-255 Red 1 On

Channel 12 – Green 2 ⚠ CH2 & CH5 must be open ⚠

0-127 Green 1 Off
128-255 Green 1 On

Channel 13 – Blue 2 ⚠ CH3 & CH5 must be open ⚠

0-127 Blue 1 Off
128-255 Blue 1 On

Channel 14 – White 2 ⚠ CH4 & CH5 must be open ⚠

0-127 White 1 Off
128-255 White 1 On

Channel 15 – Red 3 ⚠ CH1 & CH5 must be open ⚠

0-127 Red 3 Off
128-255 Red 3 On

Channel 16 – Green 3 ⚠ CH2 & CH5 must be open ⚠

0-127 Green 1 Off
128-255 Green 1 On

Channel 17 – Blue 3 ⚠ CH3 & CH5 must be open ⚠

0-127 Blue 1 Off
128-255 Blue 1 On

Channel 18 – White 3 ⚠ CH4 & CH5 must be open ⚠

0-127 White 1 Off
128-255 White 1 On

Channel 19 – Red 4 ⚠ CH1 & CH5 must be open ⚠

0-127 Red 1 Off
128-255 Red 1 On

Channel 20 – Green 4 ⚠ CH2 & CH5 must be open ⚠

0-127 Green 1 Off
128-255 Green 1 On

Channel 21 – Blue 4 ⚠ CH3 & CH5 must be open ⚠

0-127 Blue 1 Off
128-255 Blue 1 On

Channel 22 – White 4 ⚠ CH4 & CH5 must be open ⚠

0-127 White 1 Off
128-255 White 1 On

Channel 23 – Red 5 ⚠ CH1 & CH5 must be open ⚠

0-127 Red 1 Off
128-255 Red 1 On

Channel 24 – Green 5 ⚠ CH2 & CH5 must be open ⚠

0-127 Green 1 Off
 128-255 Green 1 On

Channel 25 – Blue 5 ⚠ CH3 & CH5 must be open ⚠

0-127 Blue 1 Off
 128-255 Blue 1 On

Channel 26 – White 5 ⚠ CH4 & CH5 must be open ⚠

0-127 White 1 Off
 128-255 White 1 On

Channel 27 – Red 6 ⚠ CH1 & CH5 must be open ⚠

0-127 Red 1 Off
 128-255 Red 1 On

Channel 28 – Green 6 ⚠ CH2 & CH5 must be open ⚠

0-127 Green 1 Off
 128-255 Green 1 On

Channel 29 – Blue 6 ⚠ CH3 & CH5 must be open ⚠

0-127 Blue 1 Off
 128-255 Blue 1 On

Channel 30 – White 6 ⚠ CH4 & CH5 must be open ⚠

0-127 White 1 Off
 128-255 White 1 On

Channel 31 – Built-in programs

0-7 Not functional
 8-32 Program 1
 33-57 Program 2
 58-82 Program 3
 83-107 Program 4
 108-132 Program 5
 133-157 Program 6
 158-182 Program 7
 183-207 Program 8
 208-232 Program 9
 233-255 Program 10

Channel 32 – Program Speed (⚠ CH1-4 and CH5 must be set between 1-255 ⚠)

0-255 From slow to fast

Channel 33 – Lens rotation wheel (⚠ CH1-4 and CH5 must be set between 1-255 ⚠)

0-127 Lens indexing
 128-191 CCW rotation, from fast to slow
 192-255 CW rotation, from slow to fast

Channel 34 – Pattern Wheel (⚠ CH1-4 and CH5 must be set between 1-255 ⚠)

0-63 Pattern 1 (Water effect)
 64-127 Pattern 2 (Dot effect)
 128-191 CCW rotation, from fast to slow
 192-255 CW rotation, from slow to fast